

Component Engineering


3809 Stone Way N, #110 Seattle, WA 98103-8036 • 206-284-9171 • www.componentengineering.com

Lens Change/Douser Close Timer

Installation Instructions

The purpose of this device is to close the douser during the rotation of the lens turret and re-open the douser after a predetermined time period. The device can be programmed for use with either the normal dual-coil douser, which is operated by current pulses, or with the maintained type of douser control. The closing of the douser is initiated by whichever cue commands the lens turret to start. An adjustable timer is also started which re-opens the douser at the end of its cycle.

The unit mounts by means of a connector, which plugs into a header, which in turn is to be installed on the main TA-10 circuit board.

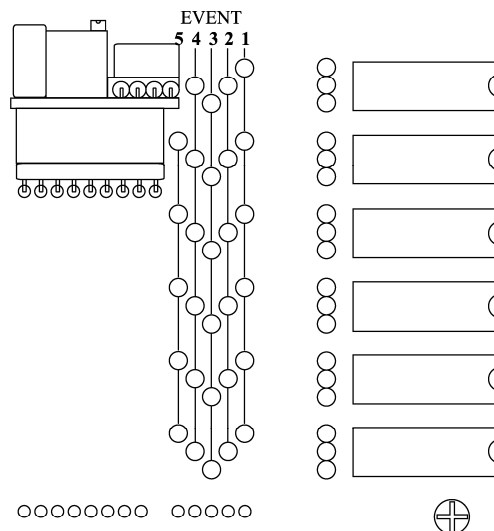


Installation

In the upper right corner of the timer board are three pads labeled “1”, “2”, and “3”. Number “3” is not used for this purpose. Numbers “1” and “2” are the input triggers and they are identical. If you wish to be able to go both from “Flat” to “Scope” and “Scope” to “Flat” you will need both inputs. If, however, you return your turret to “Flat” during the intermission, you will need only one input and it can be either one.


Connect a short (4” or so) piece of wire to one or both inputs. The other end will go to whichever cue you have assigned to start the lens turret. Rather than connecting to the cue relay contacts, however, we will connect to the coil side of the relay thus saving all the contacts for external controls (such as masking). The drawing shows the location of the cue relay coil connections and it is to one of these that you need to solder the input wire(s). It is easier to get your soldering iron in there if you unplug some of the cue relays. This is the only wiring required.

Check the location of the programming links with the illustration. See the notes below if you are using the maintained style of douser.

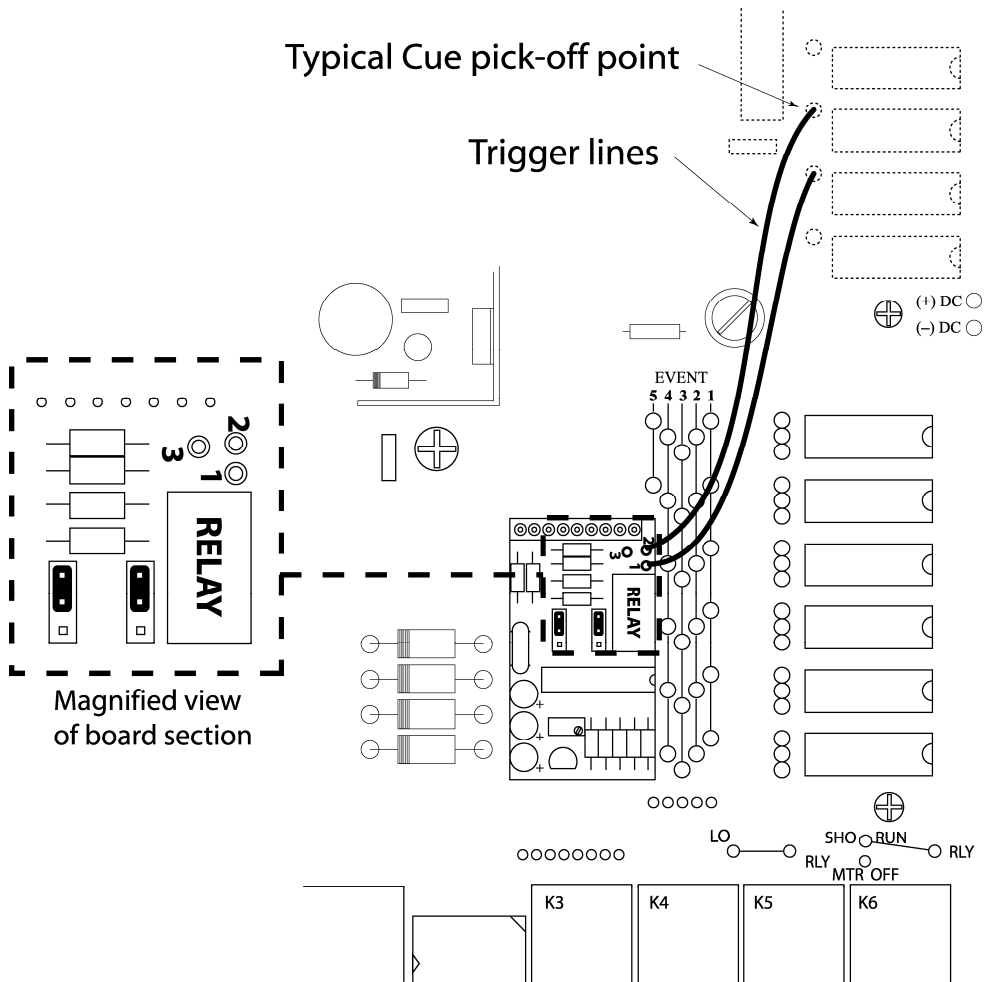


The adjustment of the timer is mostly a “set and try it” proposition. With the machinery running, initiate a lens change which will also close the douser and start the timer. Note when the douser opens again and adjust the timer to suit. Turning the timer control counter-clockwise will shorten the time. You are finished!

Notes related to maintained dousers: If your system is using the “Utility” relay for this purpose you need to move over to the “Douser Open” relay. Use the “DSR COM” and “OP NO” terminals. Operation will be exactly the same as it is now. If you have a wire connecting from the “Show Run” solder pads on the board over to one of the small pads above the large relays and already have your douser connected to the “DSR OP” terminals, you need to remove this wire as it will now be replaced by the circuitry in the timer board.

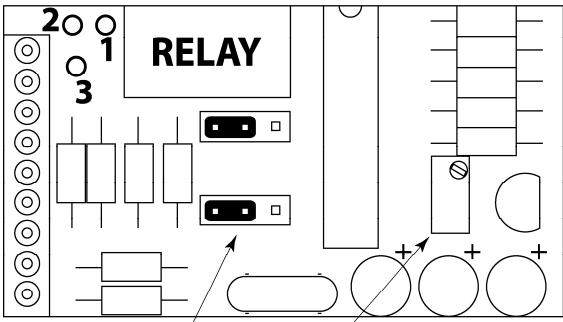

Jumper Location
for Pulsed Douser

Timer Adjust

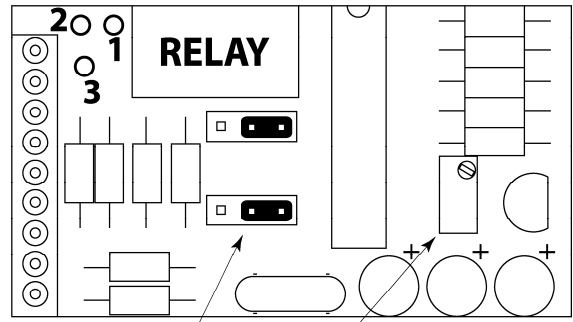

Jumper Location
for Maintained Douser

Timer Adjust